



Quick Start: 5 min install video




# **Supplies:**

- 1x Screen Protector
- 1x Microfiber Cloth
- 2x Screen Cleaning Wipes
- 3x Dust Removers
- 1x Anti-static Wipe
- 1x Squeegee


## **Prepare:**

- Remove all supplies from package
- Work in a clean, well-lit environment
- Power off and unplug device
- Remove any accessories from monitor
- Watch video: eyesafe.com/install


### Clean

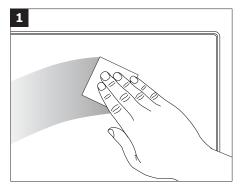

Use the **Screen Cleaning Wipe** to remove smudges and dust particles.

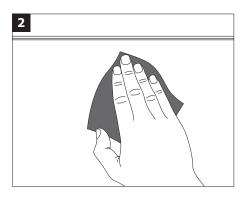


Dry the screen with the **Microfiber Cloth**.

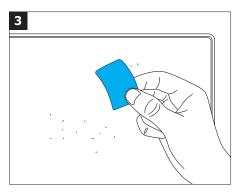


Use the **Dust Remover Stickers** across the entire screen. Take your time to remove all dust particles.


## **Apply**

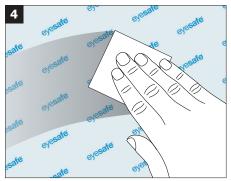

Use the **Anti-static Wipe** across the entire **Screen Protector** front and back.

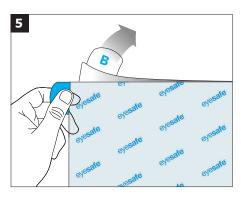


On the **Screen Protector**, Hold **Tab A.** Carefully pull **Tab B** to peel away clear backing.

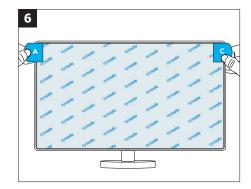


Holding **Tabs A and C**, align the **Screen Protector** by centering it over the live area of your display. This may require powering your screen on.


#### **Finish**

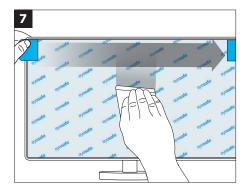

**Squeegee** along the top edge and down the center of your screen. Allow the **Screen Protector** to adhere to the entire surface. Power off the screen if it was powered on in Step 6.

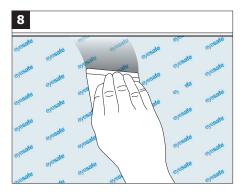

Use the **Squeegee** and with smooth downward strokes, push bubbles to edges. Caution: pressing too hard will damage the screen protector.

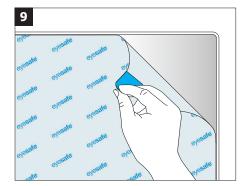

Pull **Tab C** to remove top mask. Press out remaining bubbles with your thumb. Use the **Microfiber Cloth** to remove fingerprints.